



Thule XT Kit 3150

> Instructions

VW California, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-





VW Caravelle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Multivan, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Shuttle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Transporter, 4-dr Van, **(T5)** 03-15, **(T6)** 15-

This kit is only for vehicles with fixpoint mounting.

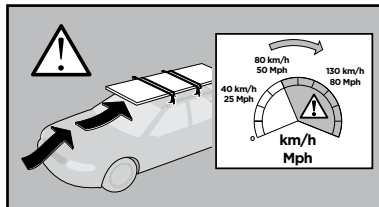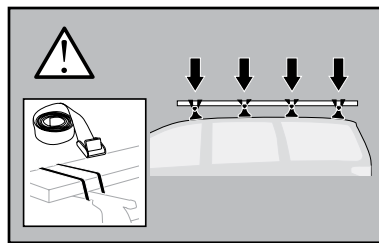
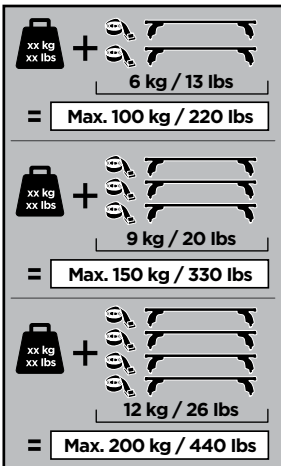
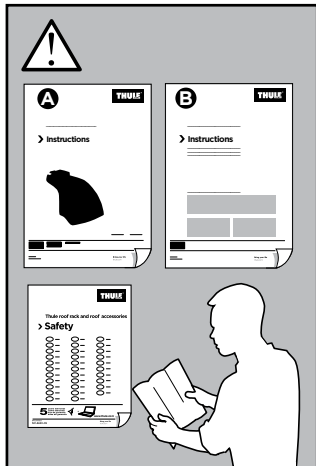


ISO 11154-E

183150

C.20150914
509-3150-01


Bring your life
thule.com

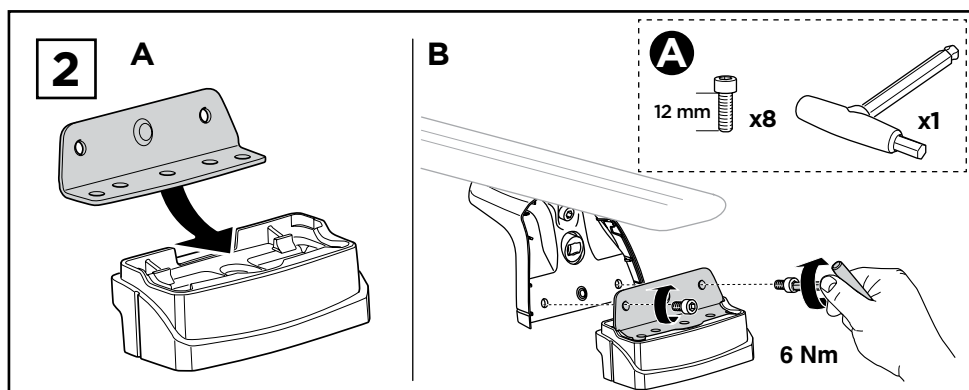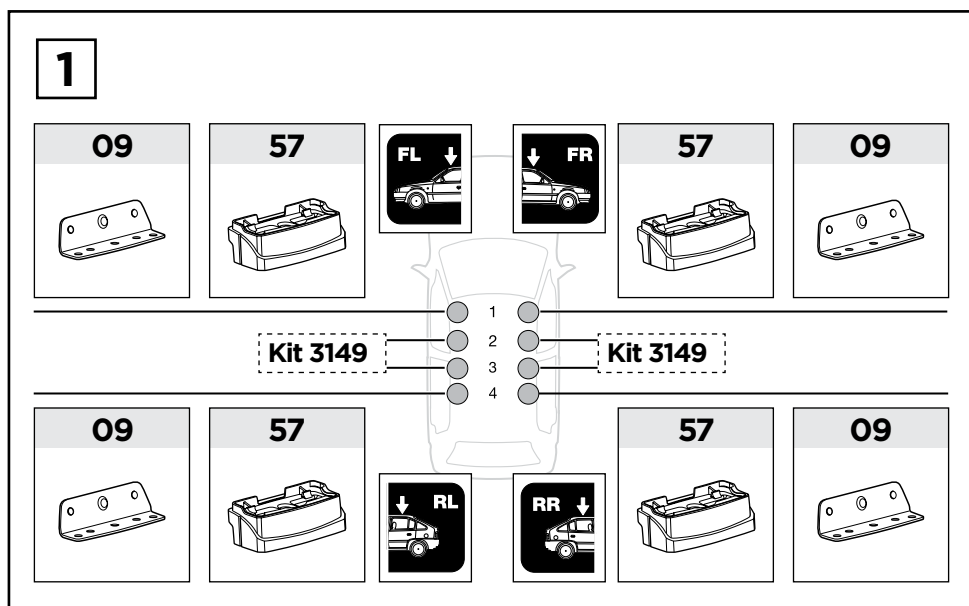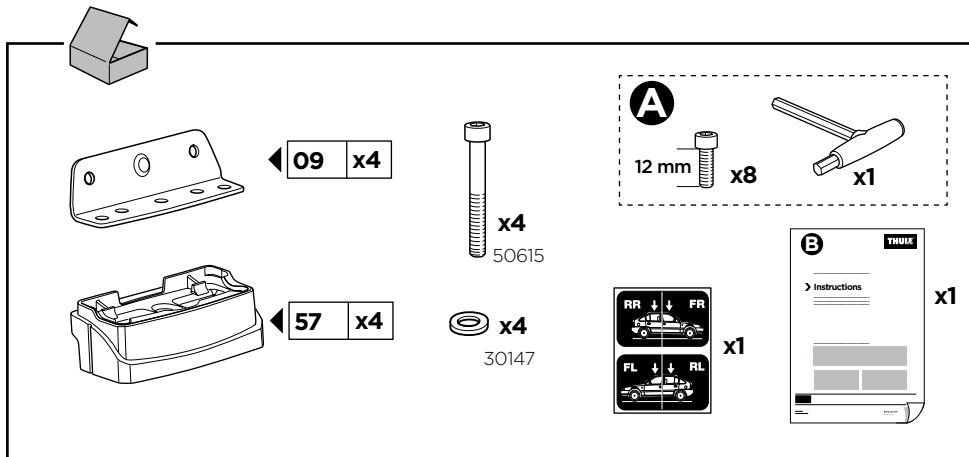


3



x1

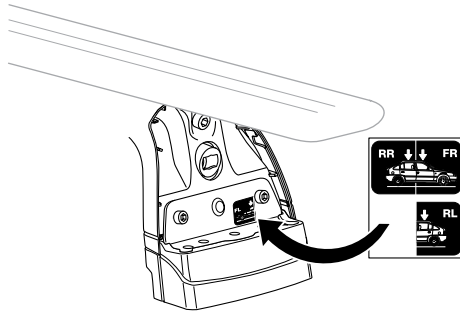

4




x4




x4


A




x1

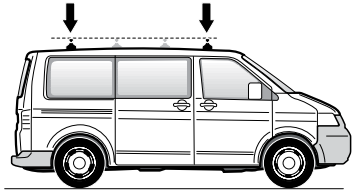

A

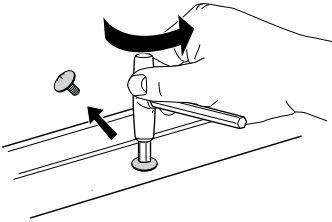


B

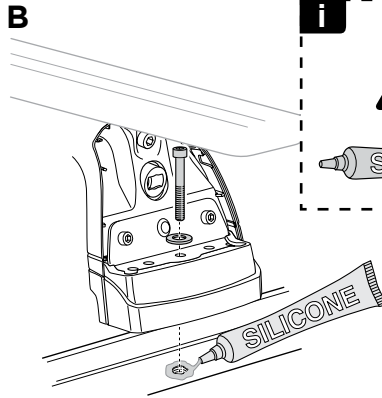

i




C

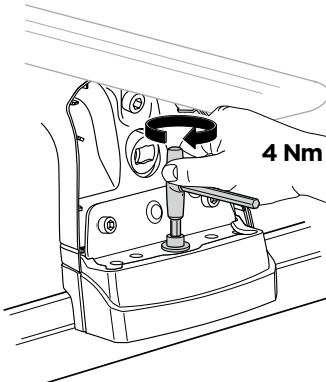

4 Nm

D

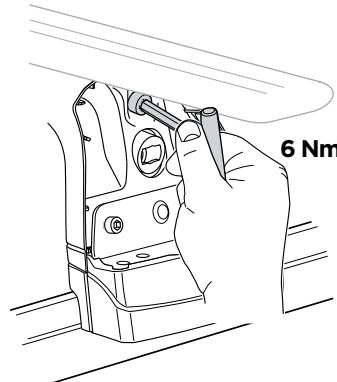

6 Nm

